

► DB1S - KOMBINERAD ENHET FÖR VÄGG

Tonnummer	Tonbeskrivning	DIP Switch	Typisk SPL @ 1m	EN54-3 SPL @24V	Andra tonen
		4 5 6 7 8			
1	800 & 1000Hz, Alternating (250ms – 250ms)	00000	103		21
2	660Hz, Intermittent (1.8s ON – 1.8s OFF)	00001	103		2
3	2400 & 2900Hz, Alternating (250ms – 250ms)	00010	110		22
4	1000Hz Intermittent (0.5s ON, 0.5s OFF X3, 1s OFF) ISO 8201	00011	100		18
5	2400 – 2900Hz Sweep, (7Hz)	00100	110		22
6	660Hz, Intermittent (0.5s ON – 0.5s OFF)	00101	103	103	Ingen
7	1000Hz Intermittent (0.25s ON, 1s OFF)	00110	100		21
8	800 - 1000Hz, Sweep, (1Hz)	01000	103	103	21
9	660Hz, Continuous	01001	103		9
10	800 & 1000Hz, Alternating (0.5s – 0.5s)	01010	103		21
11	1400 – 2000Hz, Sweep (10Hz)	01011	102		11
12	500 - 1200Hz, Sweep, (3.5s ON - 0.5s OFF)	01100	103	103	21
13	800 - 1000Hz, Buzz (Sweep at 50Hz)	01101	100		21
14	440Hz (100ms) and 554Hz (400ms), Alternating	01110	103		21
15	800 – 1000Hz, Fast Sweep, (7Hz)	10000	103		21
16	660Hz, Intermittent (6.5s ON – 13s OFF)	10001	103		16
17	1000Hz, Intermittent (1s ON – 1s OFF)	10010	100		21
18	2900Hz Intermittent (0.5s ON, 0.5s OFF X3, 1s OFF) ISO 8201	10011	106		4
19	2400 – 2900Hz, Sweep, (1Hz)	10100	108		22
20	2900Hz Intermittent (150ms ON, 100ms OFF)	10101	104		21
21	1000Hz, Continuous	10110	100		21
22	2900Hz, Continuous	11000	105		21
23	NO SOUND OUTPUT – MUTE OPTION	11001	0		1
24	2900Hz, Intermittent (1s ON – 1s OFF)	11010	105		22
25	800 & 1000Hz, Alternating (0.5s – 0.5s)	11011	103		22
26	1200 - 500Hz, Sweep, (1Hz), DIN tone	11100	103		21
27	2400 – 2900Hz, Buzz (Sweep at 50Hz)	11101	108		22
28	660Hz, Intermittent (150ms ON – 150ms OFF)	11110	103		28
29	990 - 660Hz, Alternating (0.5s - 0.5s)	00111	101		6
30	910 - 685Hz, Alternating (250ms - 250ms)	01111	100		6
31	750 - 1000Hz, Alternating (0.5s - 0.5s)	10111	98		17
32	925 - 628Hz, Alternating (250ms - 250ms)	11111	100		6